Remove propeller shaft,

refer to 26 11 000.

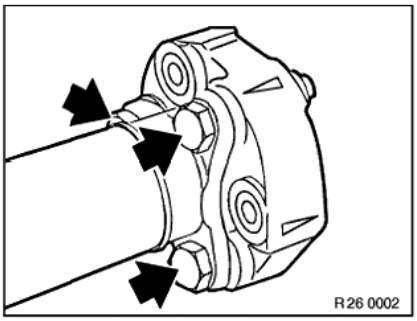

Unfasten screws and remove joint disk.

Installation:

The screw connection may only be tightened by means of the nut.

Tightening Torque,

refer to Technical Data 26 11 1AZ.

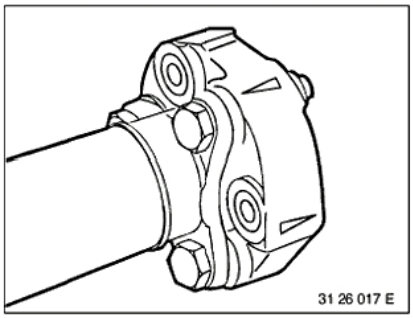

Installation:

Joint disk must be fitted in such a way that arrows point to flange arms.

Made in Germany